



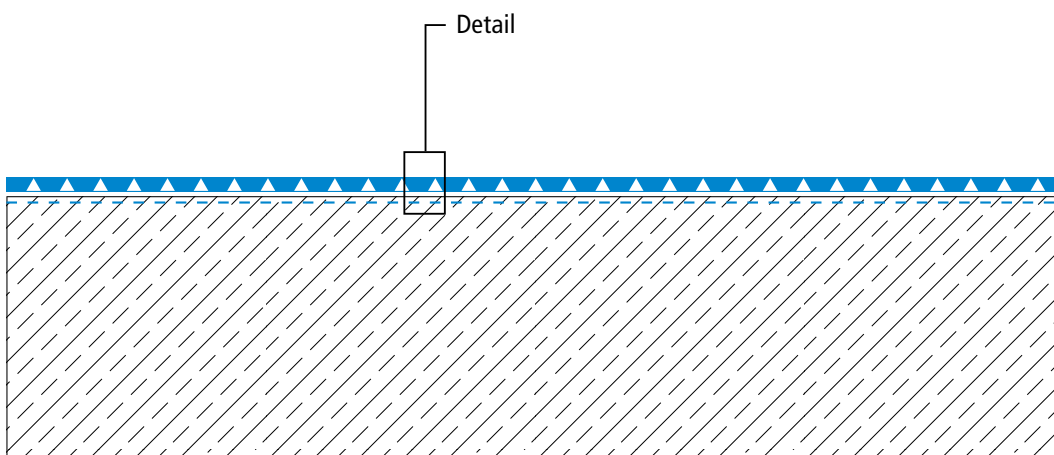

System drawings

Area

System set-up – Detail


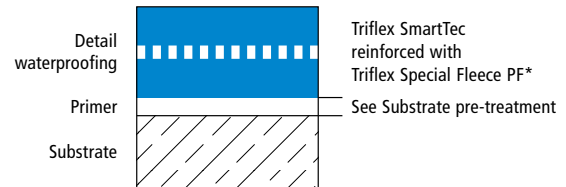




System drawings

Wall junction

System set-up – Detail

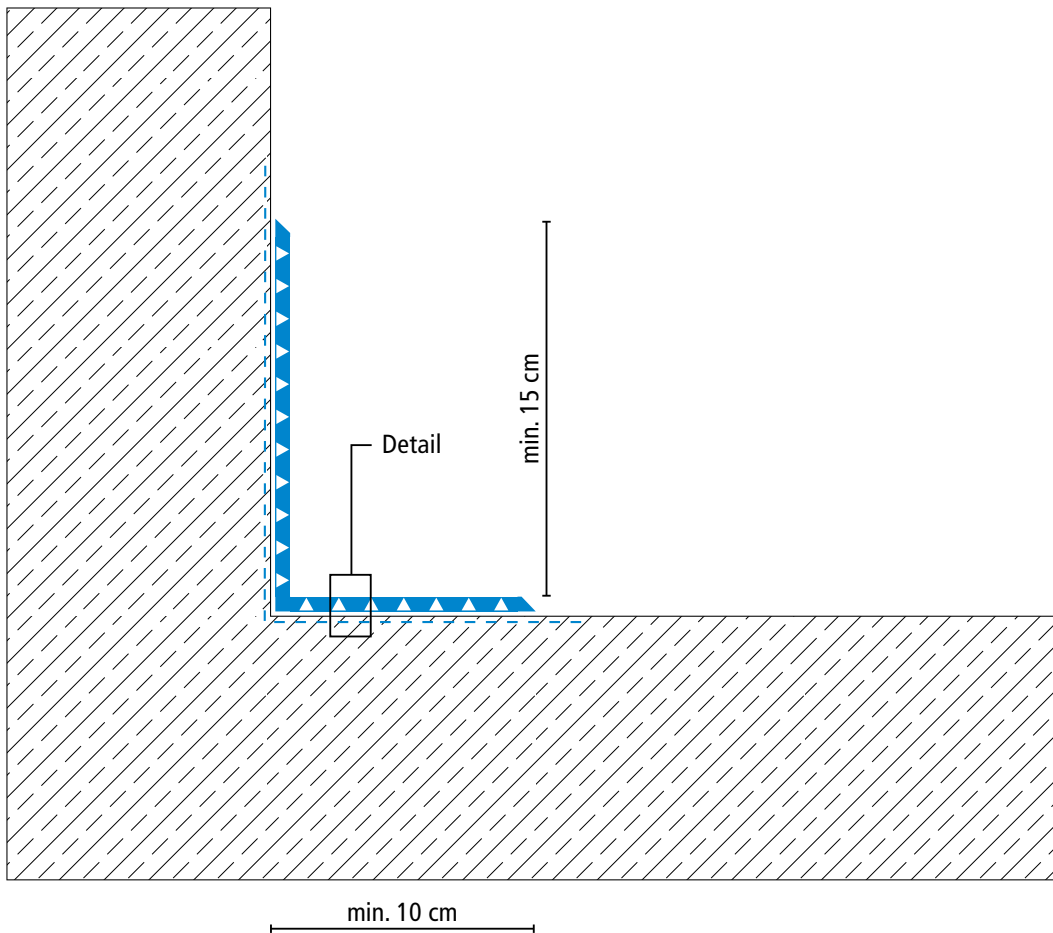
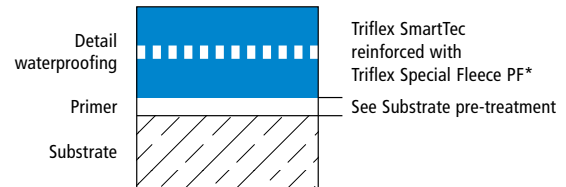




System drawings

Base

System set-up – Detail

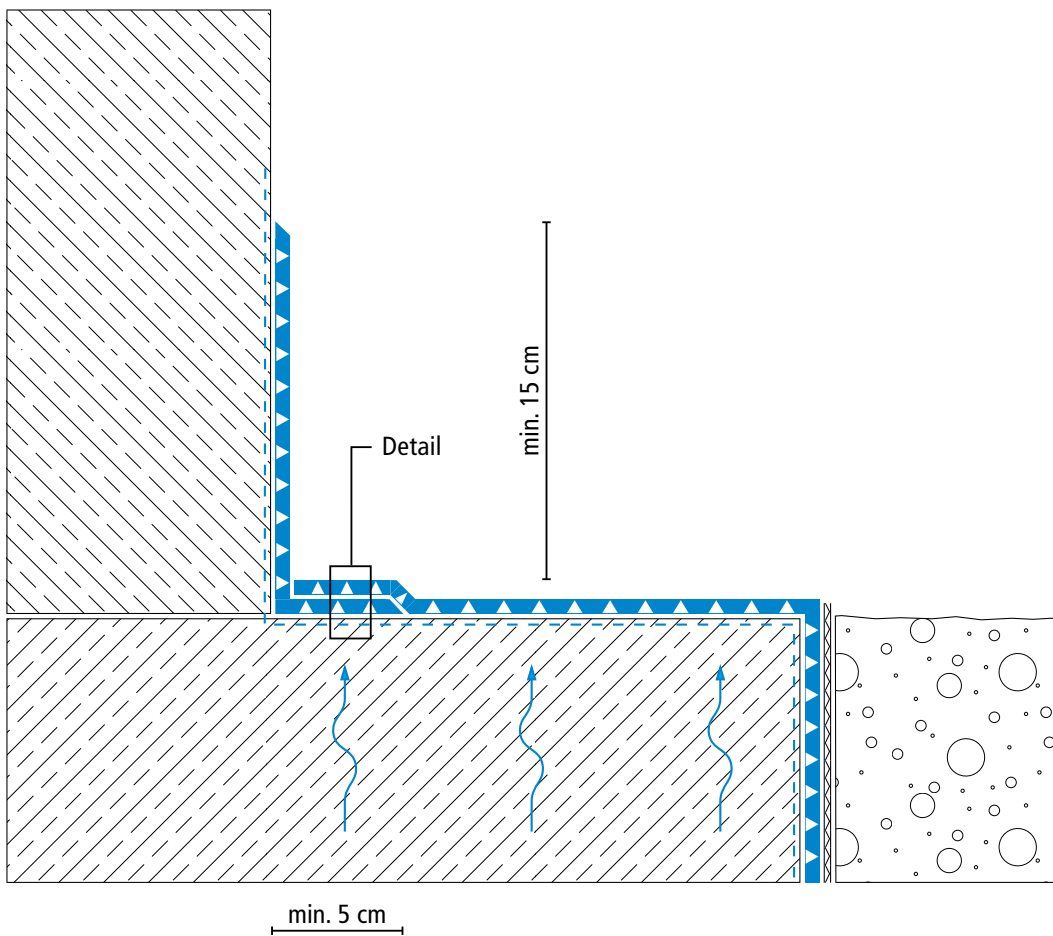
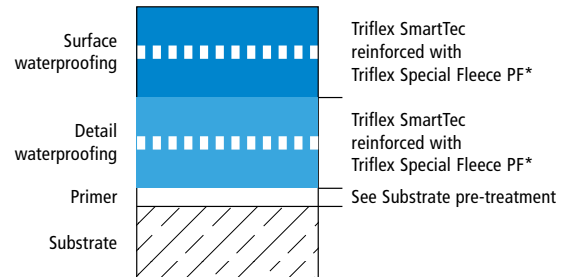




System drawings

Penetration

System set-up – Detail

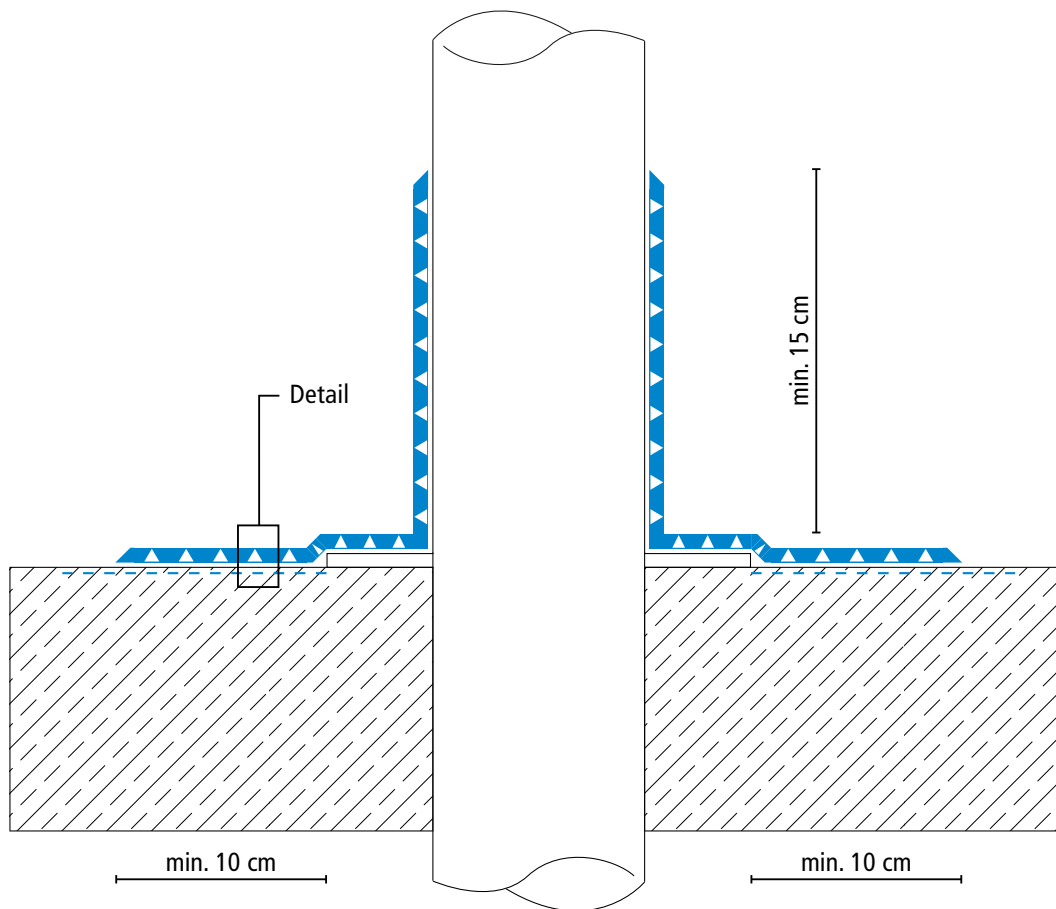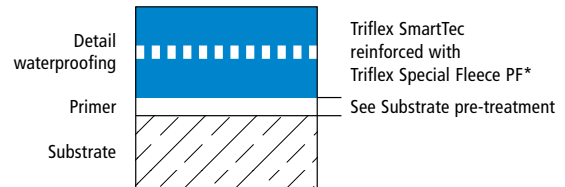

* Alternatively Triflex Special Fleece



Height differences between fleece overlaps are exaggerated.



System drawings

Surface for covering

System set-up – Detail

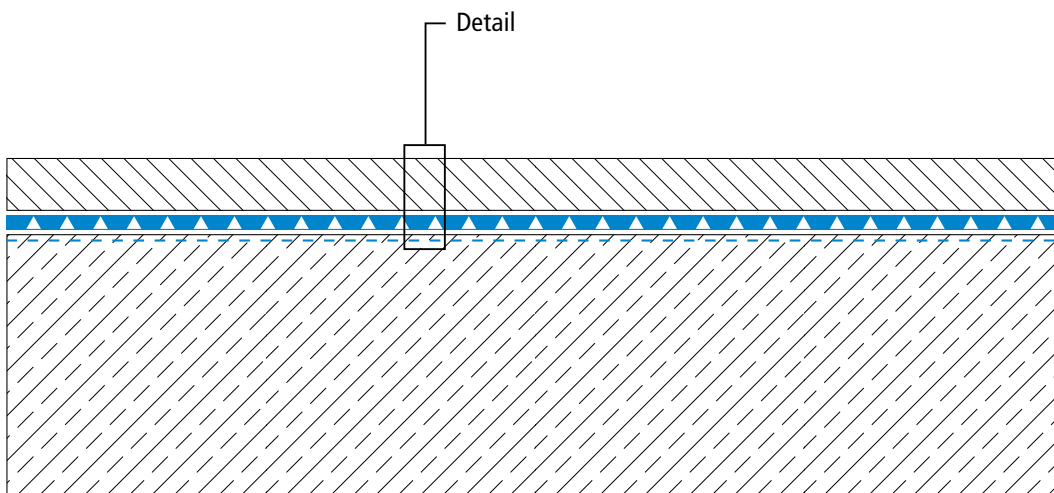
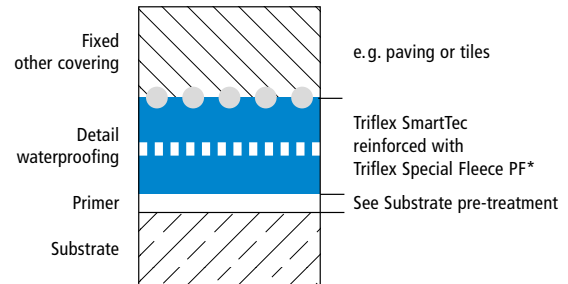




System drawings

Wall junction with covering

System set-up – Detail

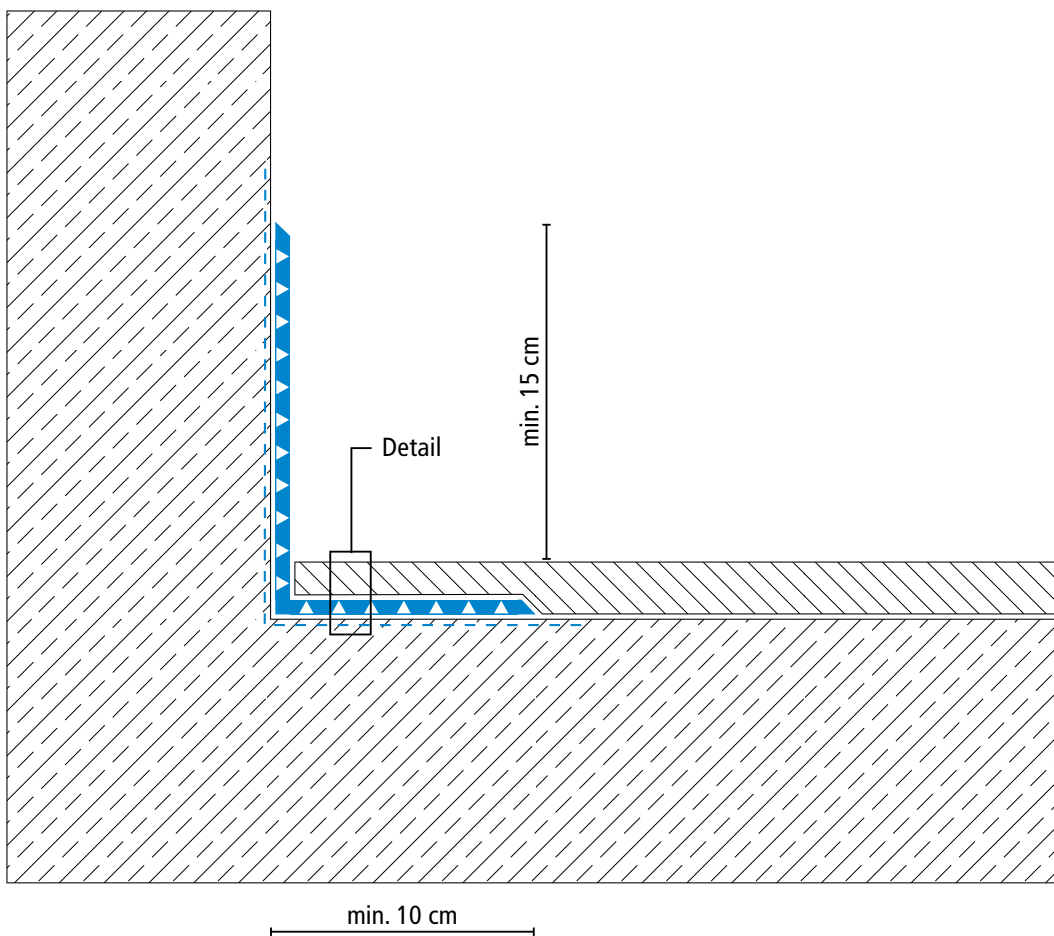
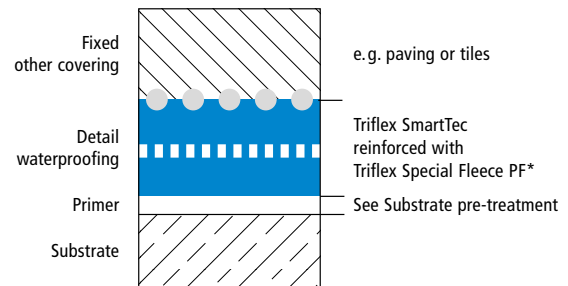




System drawings

Base with covering

System set-up – Detail

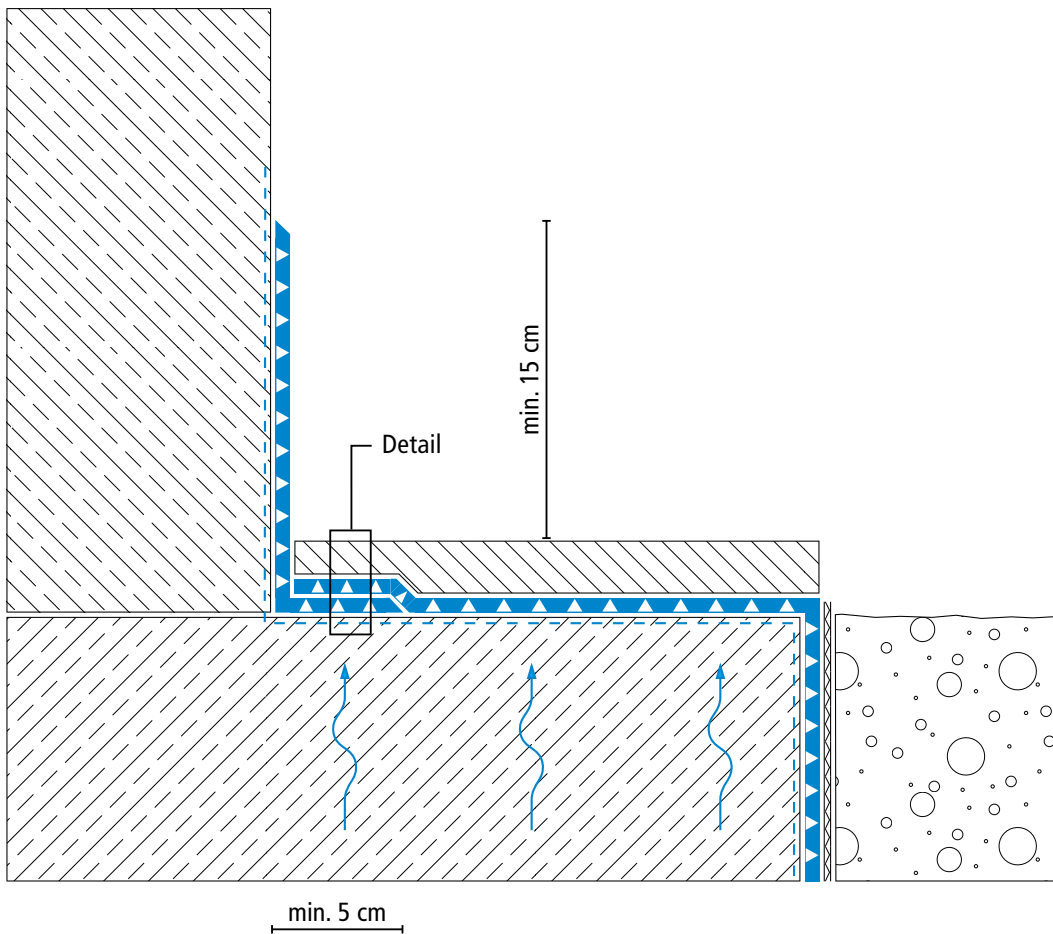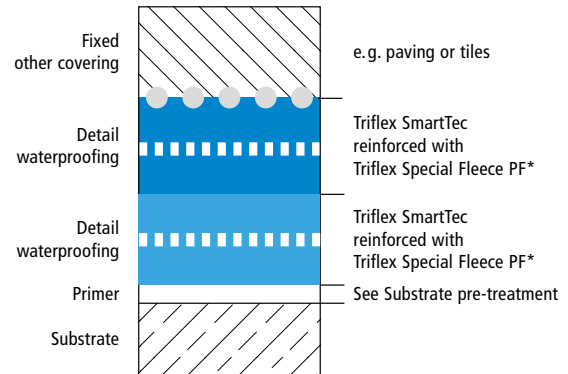



System drawings

Penetration with covering

System set-up – Detail

